

## Mastering space and time

With CIDAN **COILMASTER** you can easily handle coils with weights up to 1000 kg. You decide how many places you want, 4, 6 or 8 and easily assemble it yourself. With coils in two floors, you get more free floor space. When loading with new material, COILMASTER helps you to adjust the sheet metal in depth and perpendicular to the cut-to-length machine. The guide rollers are movable in height, lifts up the sheet and create distance so that you avoid scratches in the lacquer layer. The system has cover plates (option) so that you can use cradles with different dimensions or use a compartment as storage for eg pallets. Combine with Forstner's manual Coil Selector which keeps 6 or 8 different materials on standby. By locking all materials in the coil selector, you always have equal access to all cradles in the COILMASTER. The change from one material to the next is very fast and the risk of damage to the material is minimized.


With CIDAN's COILMASTER and a Coil Selector from Forstner, you get a highly efficient supply for your cut-to-length machine

### **The most important advantages:**

- ✓ Creates order in the workshop.
- ✓ Quick and easy access to several different material types.
- ✓ The time for material changes is dramatically reduced.
- ✓ Utilizes the floors space efficiently.
- ✓ Expandable if needs changes.
- ✓ Minimizes damage to the material.



The **guide rollers** are movable in height, lifts up the sheet and create distance so that you avoid scratches in the lacquer layer.

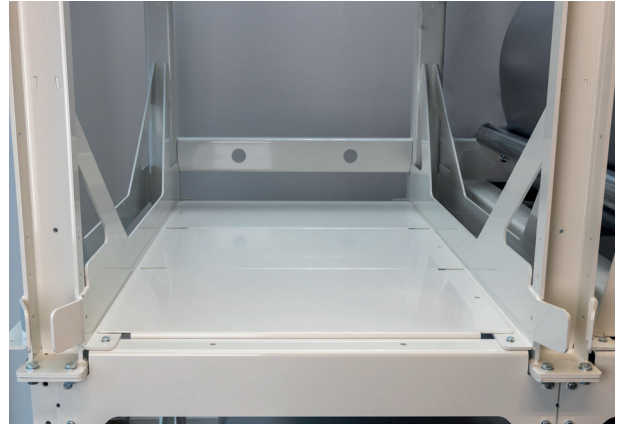

The system has **cover plates** (option) so that you can use cradles with different dimensions or use a compartment as storage for eg pallets.



Always ready with **Forstner Coil selector**.

With a Forstner Coil selector in front of your cut-to-length machine you can load and change material extremely quick. In the coil selector you can have up to 8 different material fixed and can easily feed the desired quality to your cut-to-length. Once in place in the cut-to-length, the material is disengaged and runs smoothly through the coil selector. When changing, lock the material and rewind it with the wheel. Then move the wheel to the shaft that holds the material you are going to use next and feed it into the cut-to-length. Quick, easy, smooth.



	Coil places	Outer dimensions			Weight
	number	Length mm	Width mm	Height mm	kg
<b>COILMASTER 4</b>	4	2140	1620	2352	1550
<b>COILMASTER 6</b>	6	3080	1620	2352	2250
<b>COILMASTER 8</b>	8	4020	1620	2352	2930

Read more about Coil handling from CIDAN



Dealer



CIDAN Machinery Group markets and manufactures **CIDAN, Götene, Forstner** and **nulT**  
 CIDAN Machinery Sweden AB • Box 21 • 533 21 Götene/Sweden • Phone: +46 511-245 20 • info@cidanmachinery.com • www.cidanmachinery.com

**Your one stop partner**